
Sparkle K1 User Manual

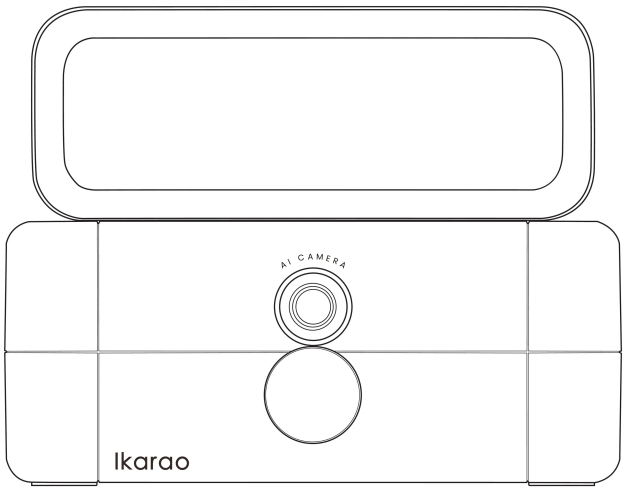





Ikarao®

Sparkle K1

Sing to Play, Sing to Learn, Sing Together

User Manual EN

01 PART-1

Safety and Privacy

Using Sparkle K1 Safely

1. Use only the included power adapter.



2. Keep the device away from water, high temperatures, and humid environments.




3. Do not place the device in a high or unstable position to avoid damage or injury caused by falling.



4. Do not block the heat dissipation area.



5. Use caution when connecting the device to power, and keep infants and young children away from power plugs and device ports.

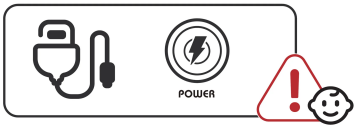



6. Clean the microphone with a soft dry or slightly damp cloth. Do not spray liquid directly, rinse with water, or use corrosive cleaners.



Camera and Microphone Privacy


Some features may use the camera or microphone, such as Moments, Spotlight, Highlights, and scene recommendations.

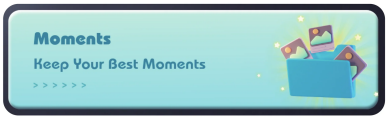

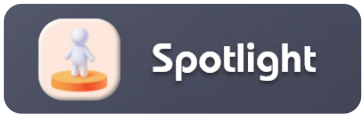




You can manage related features in Settings > AI Magic. You can also rotate the camera privacy cover to reveal or cover the camera.

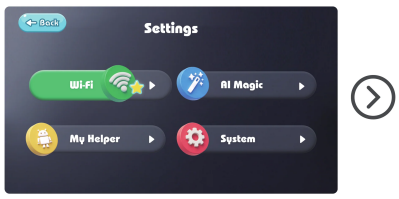



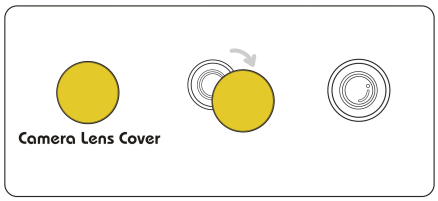


02 PART-2

Home Screen

Get to Know the Home Screen Buttons


The home screen is the starting point of your Sparkle K1 music journey. The world restoration progress is shown in the upper-right corner, so you can easily check how far the current world has been restored.

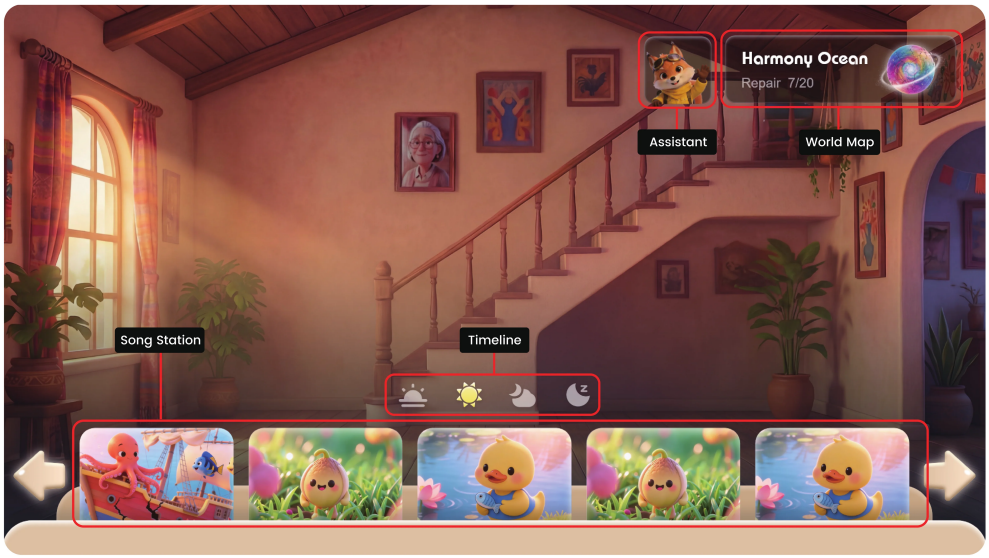


Song Selection Methods

Two Ways to Choose Songs

TV: Choose a song from a world and time period, then enter the playback page to start singing.

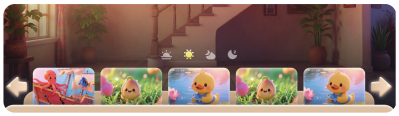


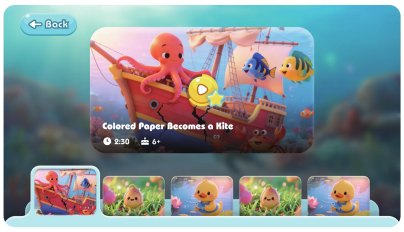

Default Playback Rule:
After selecting a song from a time period on the TV, Sparkle K1 will play songs in sequence starting from that song, for a total of 5 songs.

Phone: After entering the song playback page, scan the on-screen QR code with your phone to access the Song Station.




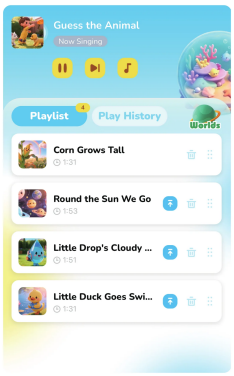

Timeline & Song Station

Switch Time Periods and Browse Songs

Each world includes different time periods: morning, noon, sunset, and night. Each time period has 5 songs, for a total of 20 songs. When you switch time periods, the world atmosphere and the songs shown in the Song Station will also change.

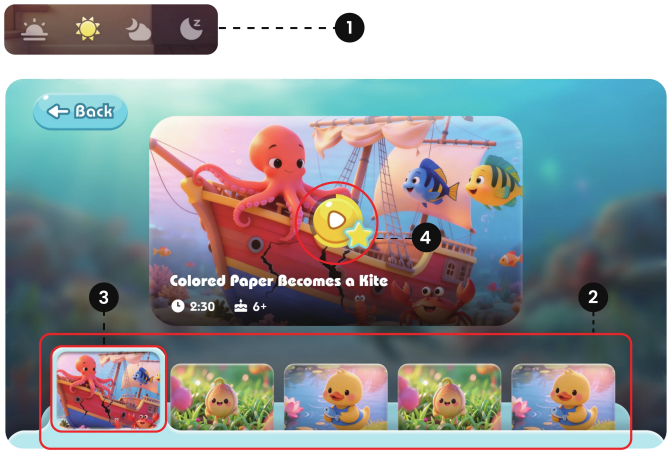

1 Timeline
Hover over the time arrow to switch to the next time period.

2 Song Station
Browse song cards in the song drawer at the bottom.

3 Song Card
Hover the cursor over a song card to select a song.

4 Play Button
Hover the cursor over the Play button. Once confirmed, Sparkle K1 will enter the song playback page and start the performance.


World Map

Explore Music Worlds

The World Map lets you choose the music world you want to explore. Each world has its own visual style, songs, and restoration progress.




Free Access:

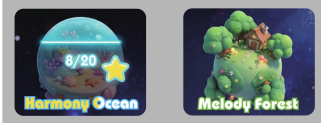

Harmony Ocean and Melody Forest

Unlock with Music Pass:

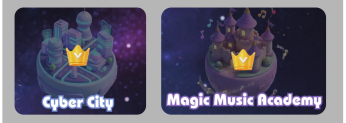

Cyber City and Magic Music Academy

Hidden World:




Unlock after completing Ocean World, Forest World, Cyber City, and Magic Music Academy.

Tip: Hover the cursor over a world to enter it.

Holiday Recommendations

Holiday Song Recommendations


When Sparkle K1 recognizes a holiday or special date, the assistant may recommend songs that match the current holiday atmosphere.

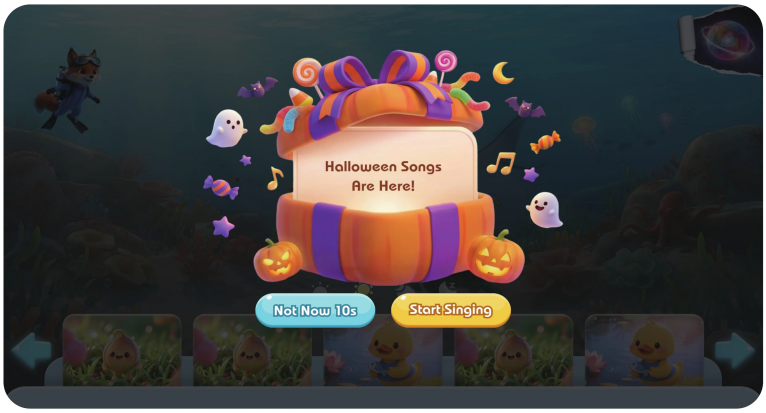


- You can accept the recommendation and go directly to the song or playlist.
- You can also close the recommendation and continue your current action.
- Holiday recommendations will not interrupt the song currently playing.

Sing Together


Sparkle K1 supports connecting two microphones.

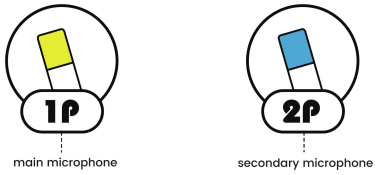

The microphone connected first becomes the main microphone, and the microphone connected later becomes the secondary microphone.

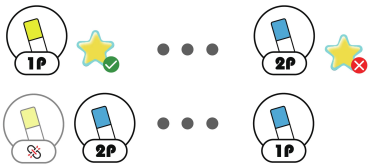

Only the main microphone can control the on-screen cursor. The secondary microphone cannot control it.
When the microphone connected first is disconnected, the secondary microphone becomes the main microphone.

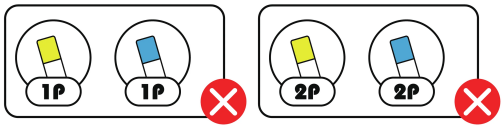

There can only be one main microphone and one secondary microphone at the same time.



Once two microphones are connected, you can sing together. In some songs, the lyrics may indicate the current singer based on the microphone color.


Moments

Save Singing Highlights


Moments are highlight photos automatically generated while you sing.You can open Moments from the Assistant Menu to view, select, edit, add effects, delete, or send photos to your phone.



1 Open Moments from the Assistant Menu and select a photo.

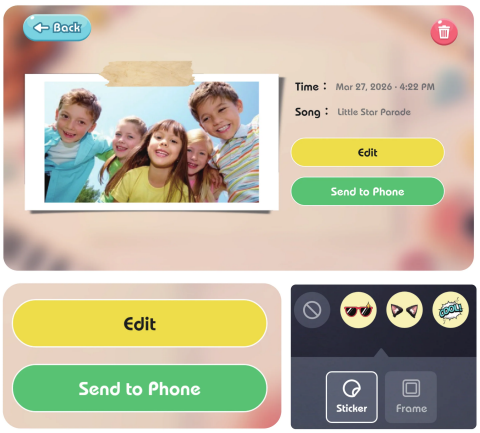


2 Add a frame, stickers, a cover, or other effects. When finished, you can choose to send it to your phone.

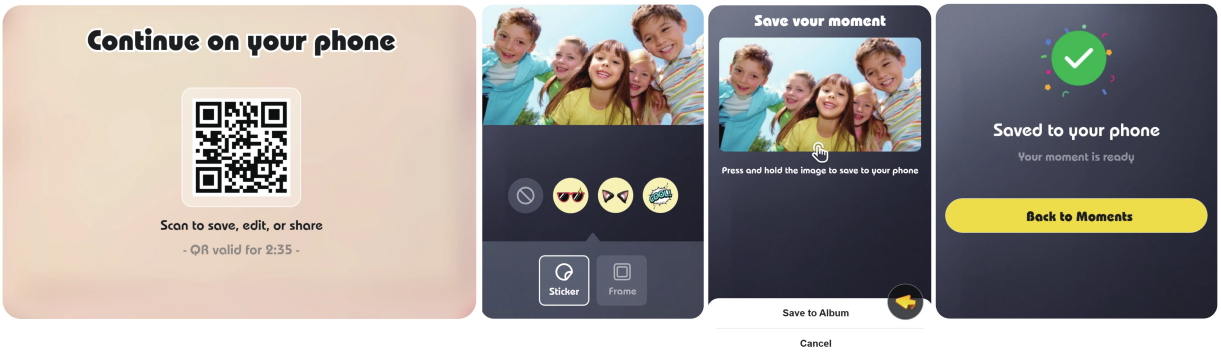

3 Scan the QR code with your phone to save, edit, or share the photo.

Power Options

Open Power from the Assistant Menu to manage device power.

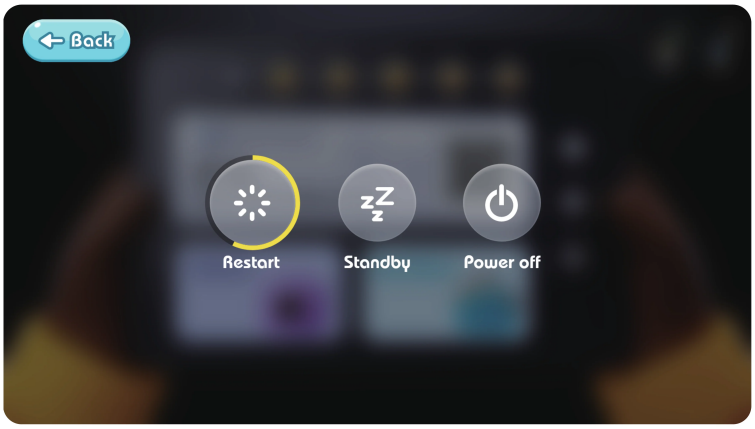

1 **Restart**
Restart the device.


2 **Standby**
Put the device into standby mode.

3 **Power Off**
Turn off the device.

Tip: Select an option and follow the on-screen instructions.

Settings Overview

Manage Device Settings

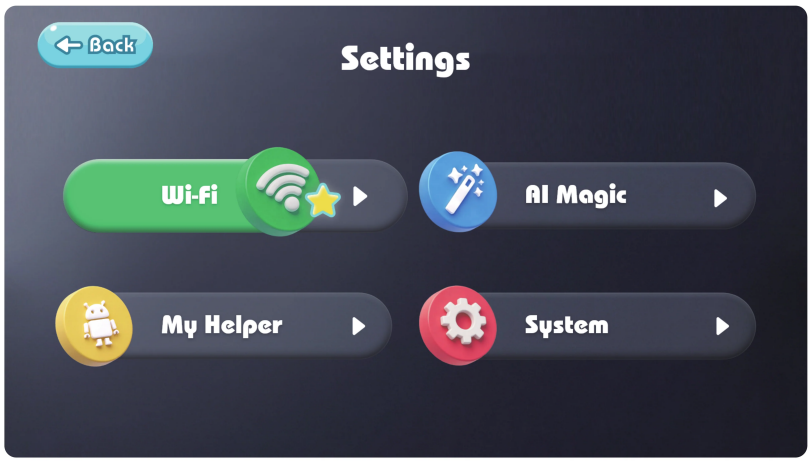

1. **Wi-Fi**
   View or change the network.
2. **AI Magic**
   Turn interaction and recommendation features on or off.
3. **My Helper**
   Manage the assistant's appearance or capabilities.
4. **System**
   Manage system features such as device information, language, sound, sleep mode, updates, policies, and reset.

Tip:
For detailed Wi-Fi connection steps, please refer first to "Connect the Product to Wi-Fi" in the startup guide.

AI Magic

Turn AI Features On or Off



1. **Festive**
   Holiday song recommendations.
2. **Scene**
   Scene-based song recommendations.
3. **Spotlight**
   When enabled, portrait or interactive effects can appear on the singing screen.
4. **Highlights**
   Automatically captures singing highlights.
5. **Bedtime**
   Reduces unnecessary sounds, reminders, and strong visual effects. Suitable for nighttime, before rest, or quiet-use scenarios.



Tips:
Hover the cursor over the desired ON or OFF state and wait for the progress ring to complete to switch.

My Helper

Manage Your Assistant

My Helper lets you manage the assistant's character, appearance, or style.




Tip:
Available options may vary depending on what is shown on screen.


System Update


Update Sparkle K1

When a required update prompt appears on the screen, you must complete the update before continuing to use Sparkle K1. The update cannot be skipped.
If the update fails, or if power is interrupted during the update, the update prompt will appear again after the device restarts. Please reconnect to Wi-Fi and follow the on-screen instructions to continue the update.


Before updating, please make sure:

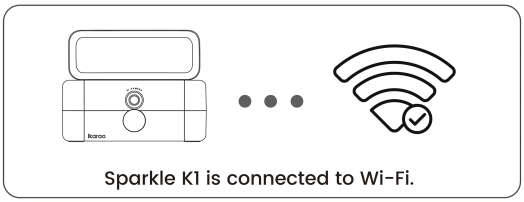
Sparkle K1 is connected to Wi-Fi.

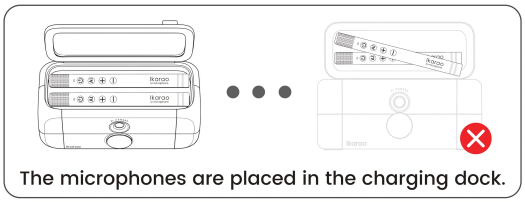
The microphones are placed in the charging dock.

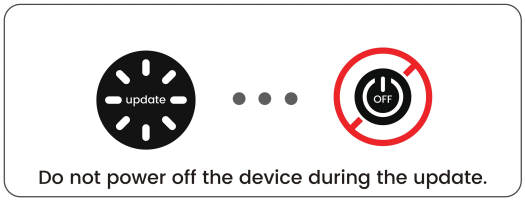

Do not power off the device during the update.

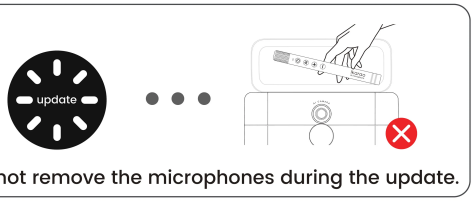

Do not remove the microphones during the update.


Music Pass Benefits Comparison




Unlock Music Pass

How to Purchase Music Pass

1. On the Assistant page, scan the QR code with your phone.

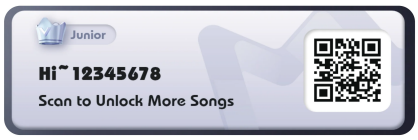

2. Tap “Buy a Pass Now” and follow the on-page instructions to purchase Music Pass.

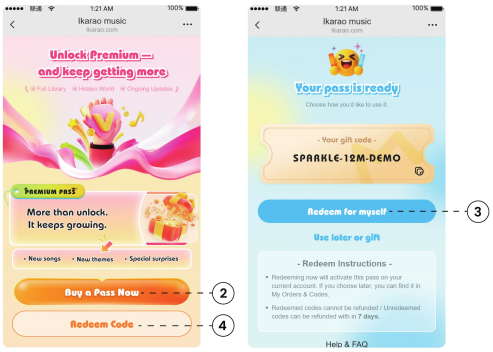

3. After purchase, a redemption code will be generated. You can tap “Redeem for myself” to redeem it to the currently logged-in account. Please make sure this account is the same as the one logged in on Sparkle.



4. You can also give the redemption code to someone else. They can scan the QR code and use “Redeem Code” to redeem it to their own account by following the on-page instructions.



English
United States (USD $)
About Us
Support

Subscribe & Get 10% Off

Sign up for IKarao news, product updates, and special offers. Use code **ikarao** at checkout.

E-mail

English

United States (USD $)

© 2026, Ikarao.